

Monitronics Monitoring and Service: 1-800-447-9239

Ademco 5110XM/First Alert FA-2000C Quick Reference Guide

Arm Away	User Code + AWAY (2), the ARM light will turn on and the display will show AWAY <i>Note: If system shows NOT READY press * to view open zones</i>
Arm Stay	User Code + STAY (3), the ARM light will turn on and the display will show STAY
Disarming / Silencing Alarms	User Code + OFF (1) If turning off an alarm enter User Code + OFF (1) again to clear display
Reset Fire Alarm	User Code + OFF (1) twice
Instant Doors	User Code + INSTANT (7) to arm system (The Exit Delay is still active with this command)
Zone Bypassing	User Code + BYPASS key (6) + Zone (01, 02, 03 ...) <i>Note: Fire/Smoke Detector Zones cannot be bypassed</i>
User Codes	<ol style="list-style-type: none"> 1. MASTER CODE + CODE key (8) 2. Enter User program (3 to 7) 3. Enter desired User Code <p>To delete a User Code</p> <ol style="list-style-type: none"> 1. MASTER CODE + CODE key (8) 2. Enter User to delete (3 to 7) then wait 3. After 3 seconds the keypad will beep and erase the code <p><i>Note: Master Code is User Code 2 and can be changed but not deleted</i></p> <p>(System will beep once when completed)</p>
Fire Drill Test	<ol style="list-style-type: none"> 1. Enter Master Code + # + 6 + 9 2. System will sound Fire Alarm, Display will show "Fire Drill Active" or "DF" 3. To end test enter User Code + OFF (1)
Trouble Display	<p>NO AC = Loss of AC power to the system</p> <p>LOW BAT = Main panel has a low battery, if LOW BAT appears with a zone number that zone has low battery</p> <p>CHECK = There is a problem with a Zone, fire zone or the main system</p>

Do not pause more than 2 seconds between each keypress or system will ignore above commands